



KT-1015 Hanging Hair Dryer



Specifications:

Electrical Source / Voltage:

110 - 120V AC / 60Hz

Amperage: 4.5 to 9.0

Output Power:

1,000 to about 1,100 Watts

Dryer Weight: about 15 pounds

Dryer Boom Weight: about 15 pounds

WARNINGS:

Please read all the instructions before assembly to prevent installation error and damage to the equipment. If the instructions are not clear – please contact Keller International for assistance (1-800-578-8772).

THIS IS A HIGH PERFORMANCE DRYER.

LOOSE HAIR NEEDS TO BE CONTAINED. HAIR NETS ARE ADVISED.

LOOSE HAIR CAN CREATE MAINTENANCE ISSUES AND YOUR WARRANTY CAN BE VOIDED IF THE UNIT IS NOT CLEANED.

IF AN ELECTRICAL MALFUNCTION OCCURS, DO NOT ATTEMPT TO FIX. OPENING THE HAIR DRYER IS AN ELECTRICAL HAZARD AND WILL VOID YOUR WARRANTY.



1) Attach the wall mount bracket to a wall stud. Remove the Pivot cover.

NOTE: DO NOT USE the cement anchor bolts provided with the equipment unless you have a cement wall. Metal wall studs will not hold unit without extra support.

IMPORTANT:
The wall mount bracket **MUST BE** centered on your wall before attaching. Make sure the holes you drill are level vertically.


Use at least two bolts of sufficient size to hold 40 pounds on your wall.



2) Connect the dryer to the dryer boom before attaching the dryer boom to the wall mount bracket.

CAUTION: This step is critical to assembling this product correctly and safely.

The Fixed Ring Slot contains the locking mechanism and the Iron Piece.

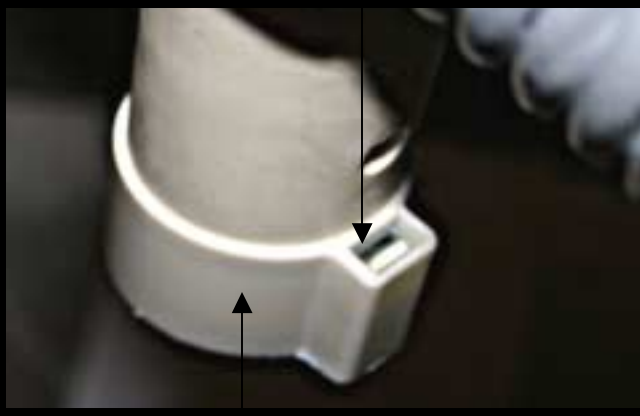

Side View of the Fixed Ring


The Fixed Ring needs to be pulled UP before attaching the dryer.

Use a thin flat blade screwdriver to trip the locking mechanism in the Fixed Ring Slot.

Pry the plastic tab away from the Iron Piece as you pull UP on the Fixed Ring.


NOTE: DO NOT USE a lot of force to trip the locking mechanism – to avoid damaging the locking mechanism.

Top Down View of Fixed Ring

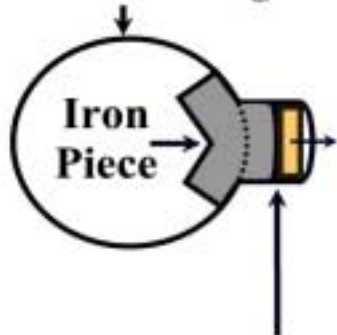


Insert a Flat Blade Screwdriver

Fixed Ring is UP exposing the Iron Piece

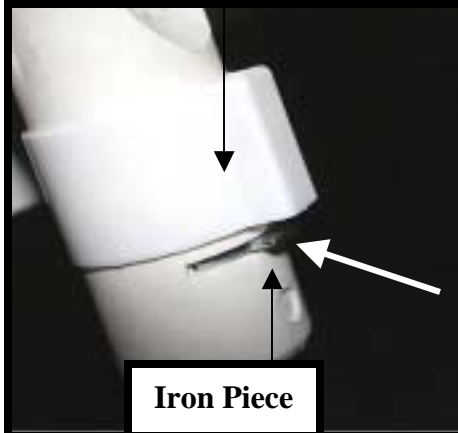


Iron Piece

Fixed Ring

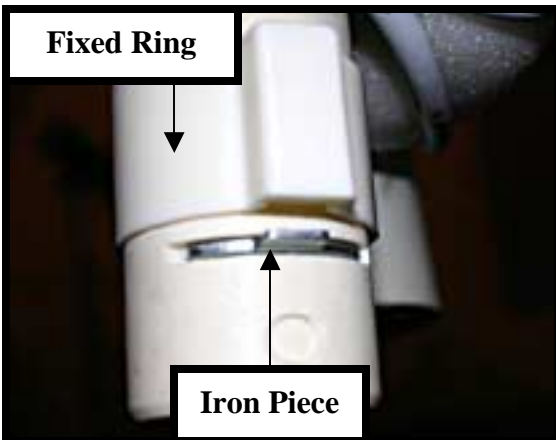


Iron Piece

Fixed Ring

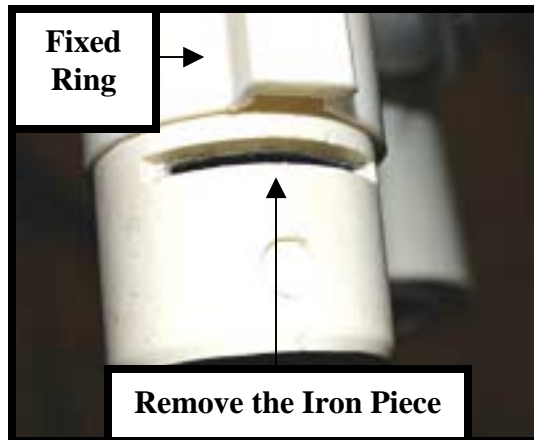

Remove the Iron Piece

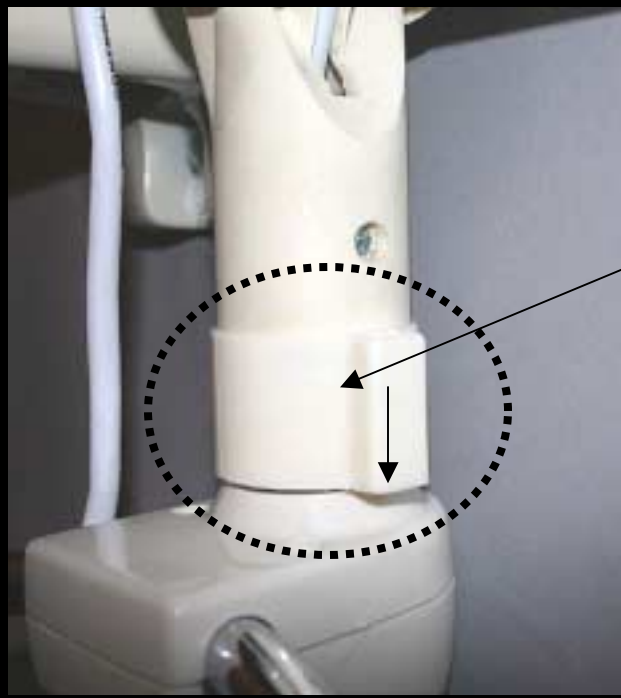



Insert the dryer into the dryer boom (remove the plastic cover from the top of the dryer).

Ensure dryer is all the way in – then replace the Iron Piece – then pull the Fixed Ring **DOWN** to lock the dryer in the dryer boom.

NOTE: You should hear the locking mechanism engage with a **CLICK**.

3) Lift the Dryer and Dryer Boom assembly **UP** and place over the Pivot on the wall mounting bracket and all the way down on the Pivot.

Attach the wall outlet plug (should be installed by a Licensed Electrician).

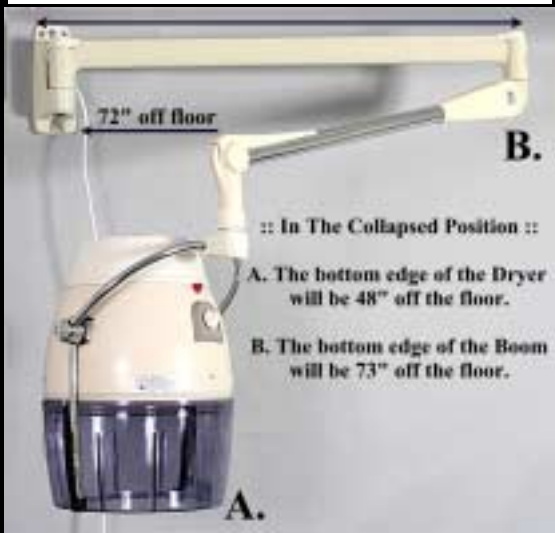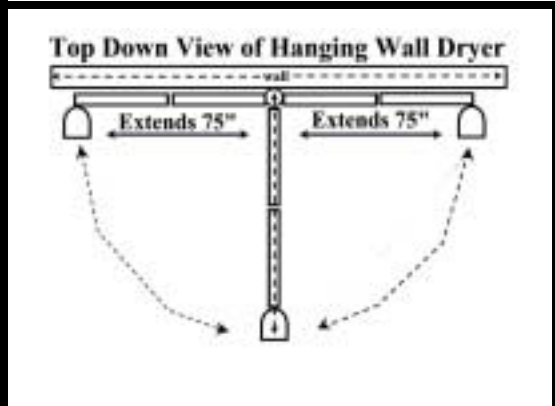

°C	°F	°C	°F
35	95	51	124
36	97	52	126
37	99	53	127
38	100	54	129
39	102	55	131
40	104	56	133
41	106	57	135
42	108	58	136
43	109	59	138
44	111	60	140
45	113	61	142
46	115	62	144
47	117	63	145
48	118	64	147
49	120	65	149
50	122	66	151

Celsius to Fahrenheit Conversion Table